

## TRIM PLATE for 10STRIKECU ELECTRIC STRIKE **USER'S GUIDE**

## TRIM PLATES for ELECTRIC STRIKES

Adjust cut-out if required.

Secure the strike to the frame as per strike

These Trim Plates can easily compensate for minor irregularities in the Lip Bracket cutout.



Position the Trim Plate on the frame cut-out to verify fit and coverage.



Bend the four tabs to hold the Trim Plate onto the frame.

For a tighter fit, pre-bend the two long flange tabs before sliding onto the frame where space allows.

## **Company Contact**

OPEN UP NEW HORIZONS

Do not leave problems unresolved. If a satisfactory solution cannot be achieved after troubleshooting a problem, please call BEA, Inc. If you must wait for the following workday to call BEA, leave the door inoperable until satisfactory repairs can be made. Never sacrifice the safe operation of the A HALMA COMPANY automatic door or gate for an incomplete solution.

installation instructions

Our Service Technicians can be called 24 hours a day, 7 days a week. For more information visit www.beasensors.com.

For email support contact us at: Tech_Services@beainc.com			
Phone: 1-800-523-2462		Fax: 1-888-523-2462	
After Normal Business Hours			
West / Mexico 1-888-419-2564	Central 1-800-407-4545	AK, MI, WI, TX, Canada 1-866-836-1863	East 1-866-249-7937

ISTP10STRIKECU

R10/11SH 1 of 1