

Olyn Monitor

* ALWAYS TEST THE UNIT ON SITE BEFORE INSTALLATION TO AVOID RESTOCKING FEES *

Install Preparation



Monitor




POE Plug




Wall Bracket

POE Plug

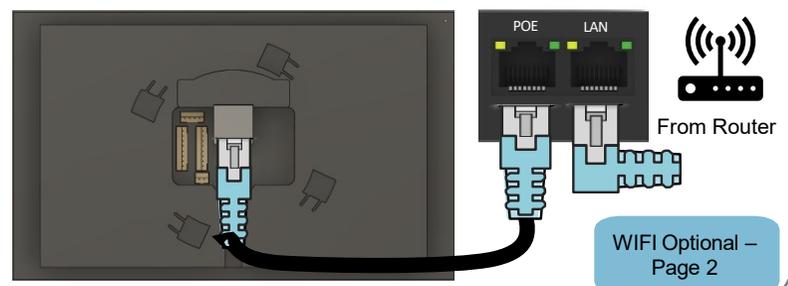

WIFI Optional – Page 2

Wall Mounting

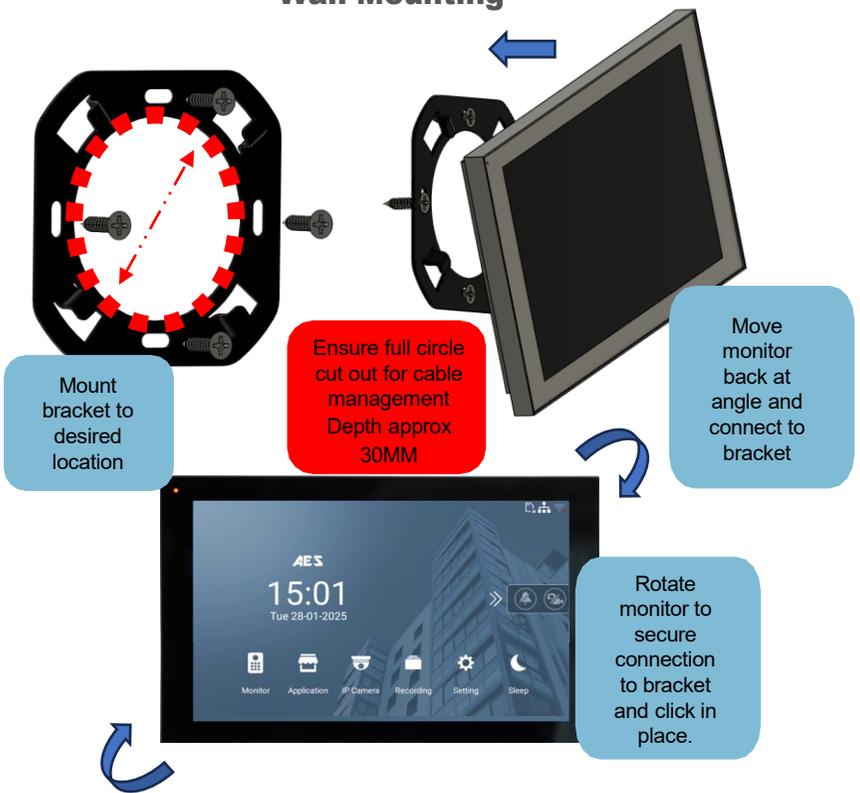


1




Power on the monitor and wait for it to finish booting up.

2

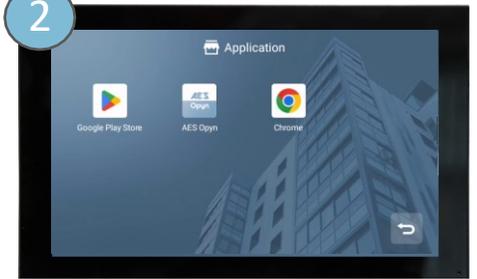

Under "Application" select the "AES Olyn" app.

3

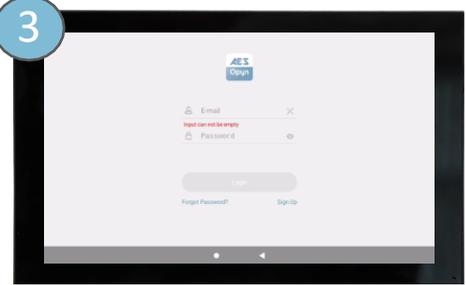

Create an account or login if you already have one.

4



Scan QR CODE to the OPYN QSG for app instructions.

* ALWAYS TEST THE UNIT ON SITE **BEFORE** INSTALLATION TO AVOID RESTOCKING FEES *

WI-FI CONNECTION

If you don't wish to use Ethernet for network connection, you can use WIFI.



Select "SETTING"

Select "WIFI"



Select "WIFI Config"

Select desired network and enter selected password.
Note: Make sure WIFI is toggled ON

ADD IP CAMERA



From the home screen click "IP Camera".
Here you can view existing IP cameras or add new ones using the "+" icon.



Enter a display name, IP address and login details for the IP Camera.
Then press the green tick to add.



- Take snapshots or video recordings of the feed.
- Swap between cameras if you have multiple and
- Exit the view using the icons on the screen.

IMPORTANT
No WIFI Antenna needed