


# RETRACTABLE EXTENSION CORD REEL

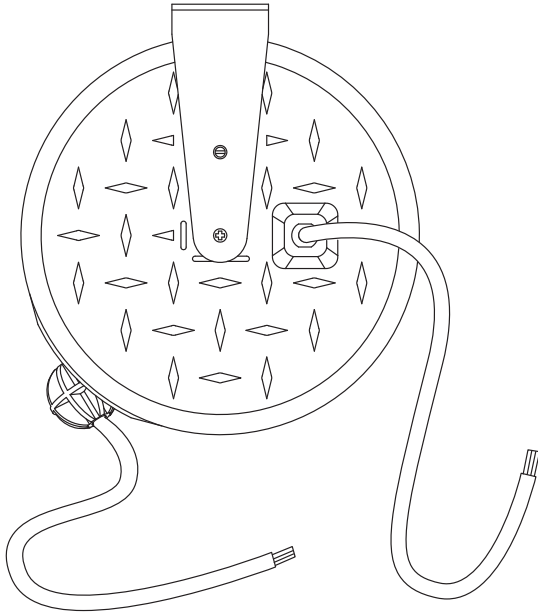

Electrical Rating - All models use 125 Volts 60 Hz

**CAUTION: DO NOT** use this cord reel in explosive atmospheres, near flammable liquids or where explosion proof equipment is required

**WARNING: DO NOT** use above hazardous locations

**CAUTION: DO NOT** use in areas where water can accumulate or in rain or mist

**CAUTION:** To reduce the risk of electrical shock and fire or injury, pull plug when servicing or disconnect from this cord reel

**WARNING:** General use cord reel only. Not for hard use. For dry, indoor location use only

**CAUTION:** Drywall will not hold the weight of the reel assembly

**CAUTION:** Read and understand mounting instructions before attempting installation and use of this product

**CAUTION:** pull out cord to full length when using the receptacle

**CAUTION: DO NOT ALLOW THE CORD TO RETRACT BY ITSELF AS DAMAGE OR INJURY MAY OCCUR FROM EXCESSIVE REWIND SPEED**

This product has a 3 prong polarized plug on the power cord. Do not attempt to bypass this safety feature by removing the round plug and defeat his safety feature. This plug will fit into a grounded outlet only one way. If the plug does not fit fully into the outlet, contact a qualified electrician. Never use with a two-wire extension cord.

## OPERATION

To operate, plug into a 125 Volt 60 Hz grounded outlet.


## FEATURES

- The cord is 30 ft long
- Mounts on the ceiling or wall
- Adjustable cord stop.

## MOUNTING

### Ceiling or Wall Installation

1. Select a location within 2 feet of an electrical outlet. The outlet for a garage door opener is desirable.
2. Drywall will not hold the weight of the reel assembly, so locate a ceiling joist or wall stud and using the mounting bracket as a template, mark the holes so they are centered on the ceiling joist or stud.
3. Attach the mounting bracket by using the two wood screws provided.
4. Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the pin.
5. Place the retaining ring on the pin and twist until the entire ring is through the hole in the pin. **DO NOT operate this reel without the retaining ring in place on the pin.**

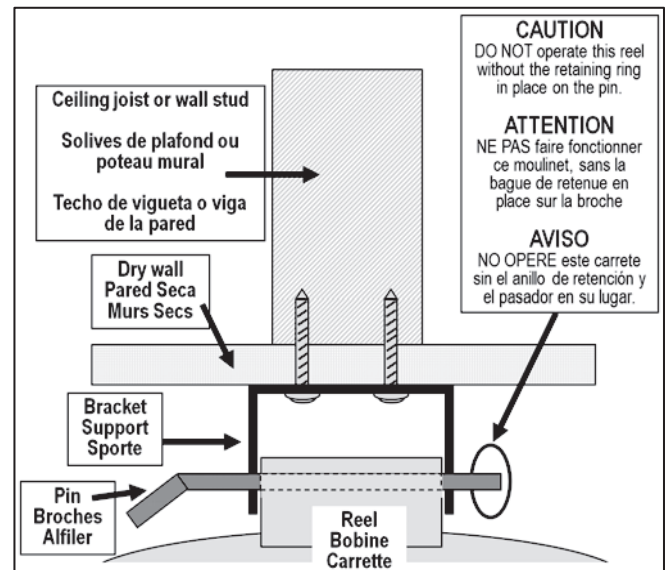

## SAFETY / CARE

- Caution: do not allow the cord to retract by itself as damage or injury may occur from excessive rewind speed.
- Adjust the cord stop to hold the receptacle at the desired length when the cord is retracted.
- Before cleaning the reel always unplug from the power source.
- Clean the outside of the cord reel only. Use a soft cloth with mild detergent. Do not use petroleum based to clean the cord reel. Never immerse the cord reel or receptacles or work lights in water. Dry thoroughly before attempting to reattach to the power source.

