

# SUPERLATCH DIGITAL WITH RAPIDRESET



SPECIFICATION  
SHEET  
**SLDSRR**

**G** A marine grade digital keypad with lever handle and RapidReset. Change the code simply and quickly without removing from the gate.

**G** Auto-latching – close the gate and the latch catches onto the strike plate. To open the gate - from outside enter the code and turn the handle, from inside simply twist the latch.

**G** No power needed – High quality digital keypad ensure long lasting durability.

**G** Internal mechanism is easily reversible for left and right hand gates.





## PRODUCT DETAILS

Product code:	Description:
SLDSRR	Superlatch Digital with shroud

## INCLUDED IN THE KIT:

- Digital keypad
- Lever Handle
- Lock mechanism
- Universally handed lock keep
- 1x rubber gasket (to sit between the keypad and the wooden post)
- 6x fixing screws
- 2x spindles (1x for up to 45mm 1-3/4" thick gates and 1x for up to 75mm (3") thick gates)
- 2x M5 x 60mm (2-3/8") screws (gates up to 45 mm (1-3/4") thick)
- 2x M5 extension pieces (use with M5 screws for gates up to 75mm (3") thick)
- 1x recessed washer (to cover the back of the top hole for the keypad)
- 1x spring to attach to the latch
- 1x spec sheet including drilling guide and installation instructions

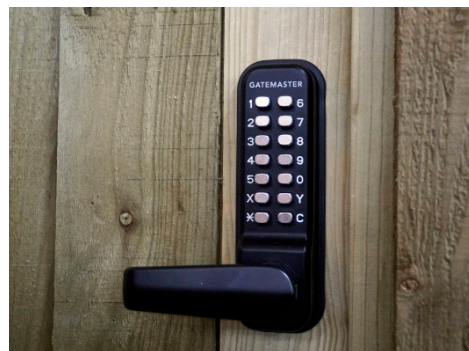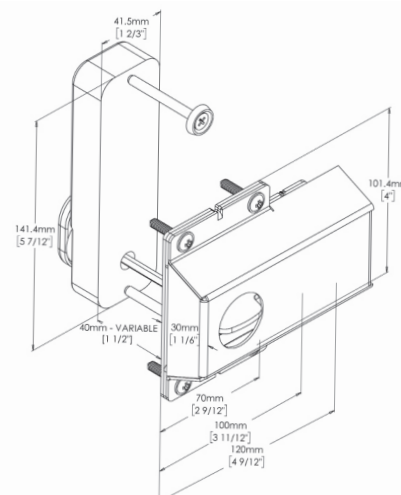

# SUPERLATCH DIGITAL WITH RAPIDRESET



SPECIFICATION  
SHEET  
**SLDSRR**

## HOW TO INSTALL

1. Drill 2 x 6.5mm (1/4") diameter holes at 130mm (25/64) centres in a vertical line (suggested position 58mm (2-1/4") from the edge of the gate).
2. Drill a 3rd hole 12mm (1/2") diameter, 18mm (47/64") up from the bottom hole.
3. Fix the rubber gasket and outside keypad using 2 x M5 countersunk screws, using the black domed washer under the top screw. The silver extension screws can be used for thicker gates, or the screws may need to be cut down for smaller thicknesses. (Please note – for anything over 75mm (3") thickness you will need to order the extension kit, product code SLDSE140).
4. Insert a rectangular spindle through the gate and fully into the keypad. The spindle should project in between 10 and 15mm (3/8" - 19/32") from the inside face of the gate. The spindle can be cut if the supplied lengths do not fall within these tolerances.
5. Assemble the Superlatch backing plate, latch plate and shroud. The backing plate is reversible for left and right hand gates, ensure the latch moves vertically up and drops back down. A spring is supplied which is recommended to fit to ensure the latch will always return.
6. Fit the lock assembly over the spindle and fix with 4 screws.
7. Fix the keep plate to the gate post so it engages with the latch.

## DRILLING GUIDE SUPPLIED WITH THE LOCK

## LOCK CODE:

C \_\_\_\_\_

## TO CHANGE THE CODE

To change the code you will need to know what the keypad is currently set to.

1. Enter existing code.
2. Fully press and hold the code change button \* (until step 5)
3. Press 'C' button to clear the existing code.
4. Press the digits that are to be in the new code. Once the new code has been entered, press all the digits in the code once again to ensure that all the digits in the code are set.
5. Release the code change button.
6. Press 'C' button or rotate the lever handle to set the new code.
7. The new code is now set and ready for use.
8. Check that the code is working and that it is withdrawing the latch/deadbolt before closing the door/gate.

## MAINTENANCE

6 monthly:

1. Remove keypad from the gate.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.

