

## Wiring CWSYS to Viking R-6

CW-INT terminals 1 & 2 are AC/DC input power (8-24 VAC, 8-28 VDC). Terminals 4 & 5 provide the relay closure to open the gate.

