




# KEY SWITCH USER'S GUIDE

SWITCHES

## Installation

1. Place the mortise cylinder through the 1-3/16" hole in the center of the aluminum faceplate.
2. Mount the cylinder/switch bracket on the reverse side of the faceplate. Make sure that the teeth are positioned inside the grooves along the cylinder. Attach the cylinder nut to fasten.
3. Insert the switch(es) into the 1/2" holes located on the bracket below the cylinder. For ideal installation thread the top nut an 1/8" down and tighten bottom nut using a 9/16" wrench.

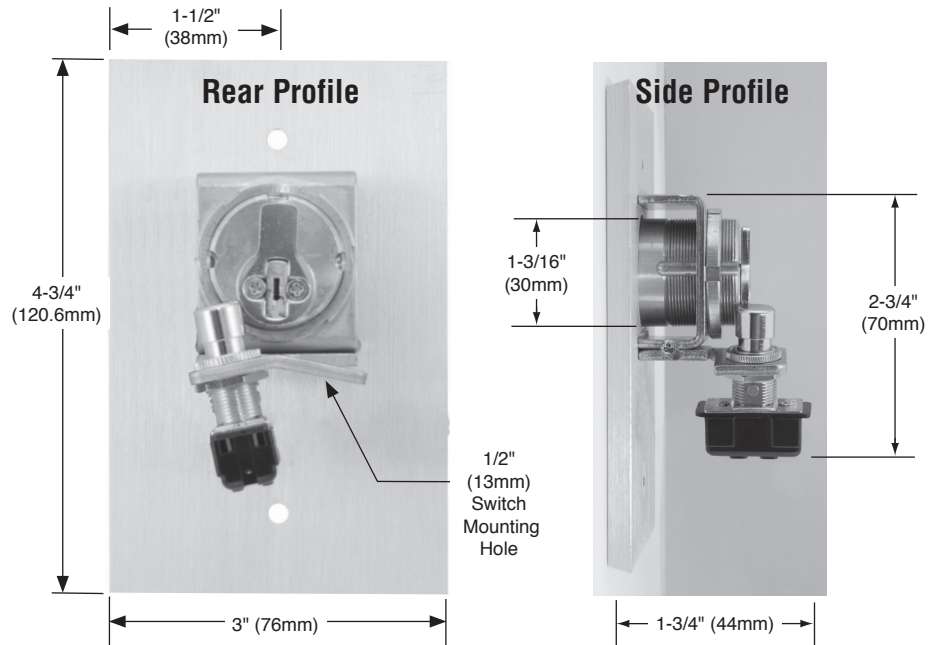

75.5714.02  
IS960-BEA

BEA Inc. RIDC Park West 100 Enterprise Drive Pittsburgh, PA 15275  
Phone: 412.249.4100 | Fax: 888.523.2462

PCN16034  
R06/16TG




# KEY SWITCH USER'S GUIDE

SWITCHES

## Installation

1. Place the mortise cylinder through the 1-3/16" hole in the center of the aluminum faceplate.
2. Mount the cylinder/switch bracket on the reverse side of the faceplate. Make sure that the teeth are positioned inside the grooves along the cylinder. Attach the cylinder nut to fasten.
3. Insert the switch(es) into the 1/2" holes located on the bracket below the cylinder. For ideal installation thread the top nut an 1/8" down and tighten bottom nut using a 9/16" wrench.

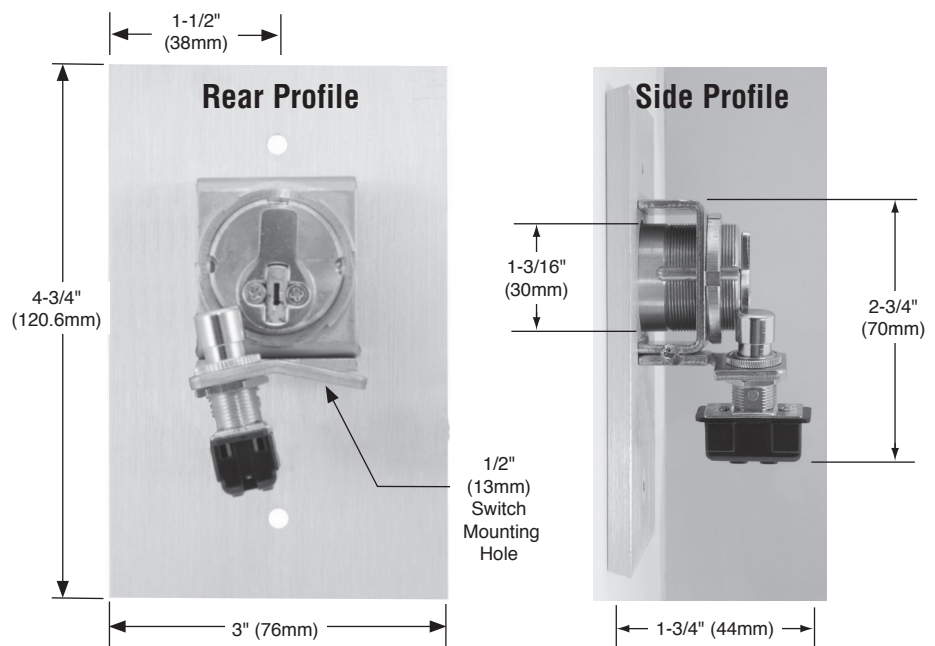


75.5714.02  
IS960-BEA

PCN16034  
R06/16TG

## Wiring

1. Make wire connections as shown.
2. Fasten faceplate assembly to electrical box with the tamperproof 6-32 machine screws and spanner hand tool supplied.

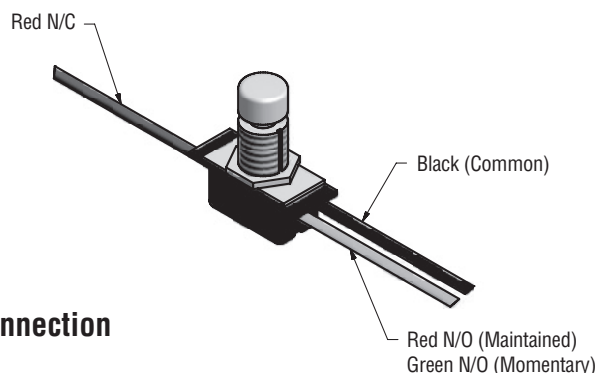

### SPDT Wire Connection

## Specifications

| Description       | Switch Mode      | Switch Configuration | Switch Rating                                      | Standard Finish      |
|-------------------|------------------|----------------------|--|----------------------|
| 960-MO Key Switch | Momentary Action | SPDT N/O & N/C       | 3A @ 125 VAC/VDC  & CSA<br>1A @ 250 VAC/VDC  & CSA | 28 or 40<br>28 or 40 |

**NOTE:** Specifications are subject to change without notice.



Our Service Technicians can be called 24 hours a day, 7 days a week. For more information visit [www.beasensors.com](http://www.beasensors.com).

For email support contact us at: [Tech\\_Services@beainc.com](mailto:Tech_Services@beainc.com)

Phone: 1-800-523-2462

Fax: 1-888-523-2462

After Normal Business Hours

West / Mexico  
1-888-419-2564


Central  
1-800-407-4545

AK, MI, WI,  
TX, Canada  
1-866-836-1863

East  
1-866-249-7937

## Wiring

1. Make wire connections as shown.
2. Fasten faceplate assembly to electrical box with the tamperproof 6-32 machine screws and spanner hand tool supplied.

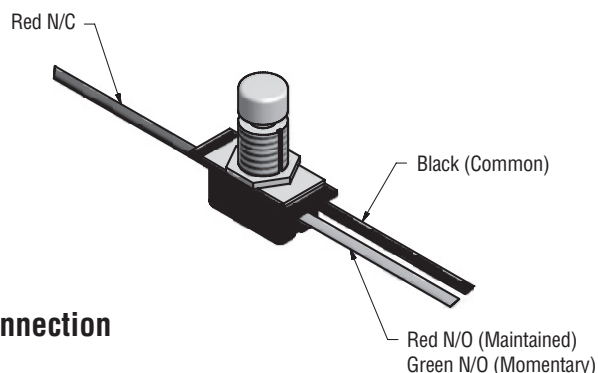

### SPDT Wire Connection

## Specifications

| Description       | Switch Mode      | Switch Configuration | Switch Rating                                      | Standard Finish      |
|-------------------|------------------|----------------------|--|----------------------|
| 960-MO Key Switch | Momentary Action | SPDT N/O & N/C       | 3A @ 125 VAC/VDC  & CSA<br>1A @ 250 VAC/VDC  & CSA | 28 or 40<br>28 or 40 |

**NOTE:** Specifications are subject to change without notice.



Our Service Technicians can be called 24 hours a day, 7 days a week. For more information visit [www.beasensors.com](http://www.beasensors.com).

For email support contact us at: [Tech\\_Services@beainc.com](mailto:Tech_Services@beainc.com)

Phone: 1-800-523-2462

Fax: 1-888-523-2462

After Normal Business Hours

West / Mexico  
1-888-419-2564

Central  
1-800-407-4545

AK, MI, WI,  
TX, Canada  
1-866-836-1863

East  
1-866-249-7937